



LD Products

PANASONIC KX-P4450 TONER KIT - INSTALLATION INSTRUCTIONS

Please read these instructions thoroughly before proceeding.

1. Turn the power off.
2. Open the front cover and lift the clamshell release lever to raise the clamshell.
3. Remove the old toner disposal bottle and the old cleaning pad. Seal the toner disposal bottle with the green cap.
4. Install the new toner disposal bottle and the new cleaning pad. Make sure the green cap is not placed on the top of the new toner disposal bottle.
5. Lower the clamshell until it is locked, and close the front cover.
6. Shake the toner bottle well before opening. Remove the cap of the toner bottle, gently remove the inner seal, and then attach the toner spout.
7. Remove the hopper cover.
8. Insert the spout into the hopper and add the entire bottle of toner to the hopper.
9. Close the toner supply cover.

STORAGE WARNING

This cartridge is light and temperature sensitive.
Please store it in a dry, cool, and dark place.

*All brand names and trademarks are the properties of their respective holders and are referred to here for descriptive purposes only. We are not associated with any printer and/or original printing supplies manufacturers.

www.LDProducts.com

2500 Grand Ave
Long Beach, CA 90815

Phone. 888-321-2552
Fax. 562-986-9429